
Disabling Transaction Drawer's Inside Door Auto Open Feature

For Transaction Drawer Models 00500991 to 993

E. F. Bavis & Associates, Inc.

201 Grandin Road
Maineville, Ohio 45039
(513) 677-0500

Table of Contents

Installation Tool List.....	1
Installation Procedure	1
Door Lift Bracket Location.....	2

Installation Tool List

5/16" Wrench or Nut Driver
Gloss Red Paint

Procedure

1. With the drawer run to the outside, remove the (2) 5/16" acorn nuts holding each of the Inside Door Lift brackets in place. (NOTE: There is one of these brackets on each side of the sliding Red Bin. (See Drawing for its location))
2. Clean and carefully paint the raw metal that was under the brackets and the back of the brackets to prevent rusting.
3. Reinstall the acorn nuts back onto the studs.
4. After the paint has dried the drawer can be closed, and the brackets packaged, labeled and stored so they can be reinstalled later if needed. It is recommended to remove the inside back cover with the Night Lock on it, (5 Screws), and store the bracket package inside the drawer next to the motor.
5. If the drawer is still going to be used, it is recommended that a drawer knob or pull be installed to make it easier to open the inside door.

Door Lift Bracket Location



