

201 Grandin Road Maineville, Ohio 45039 (513) 677-0500

# **Straight MSR Stand Manual**

Revised: 05/11/2015

PN: 00900279

## **MSR Stand Manual**

## **Table of Contents**

Parts List	1
System Overview	1
Straight MSR Stand Installation	
Straight Assembly Illustration	4
Suggested Bollard Placement	5

#### **Parts List**

PART#	<u>DESCRIPTION</u>	QTY
27036591	MSR/Video Weldment	1
27033011	MSR/Video Mounting Angle (Installed)	2
27034011	MSR/Video Base Cover (Installed)	1
27044991	MSR/Video Cable Kit (Installed)	1
06926036	1" Hole Plug (Installed)	1
22139011	34mm Set Screw Collar (1 if MSR only, 2 if MSR/Video) (Installed	1 or 2
97005061	3/8-16 Nylon Locking Nut (Installed)	3
97006000	3/8 SAE Flat Washer (Installed)	6
97310063	3/8 ID x 3/4 OD x 1-15/16 Spacer (Installed)	1
97482301	3/8-16 x 3 Hex Cap Screw (Installed)	3
00900271	MSR Stand Manual	1
06926019	7/8" Snap In Bushing	2

#### **System Overview**

The MSR, (Magnetic Strip Reader), and the MSR/Video Stand Assemblies are designed to be used with the TransTRAX Captive Carrier – Reverse Customer delivery system. Like the TransTRAX Captive Carrier, the stand is designed so that it can be mounted directly to the Customer Vertical Tube. With this design, it can be used on any height island/curb up to 15", by cutting the dimension of the island/curb height off of the bottom of the Customer Vertical Tube. There will need to be an 110Vac circuit available in the canopy that is within 24" of where the customer vertical comes through the canopy ceiling.

The MSR and audio/video cables, as well as the lanes control cables are run through the unit inside of the systems tubing. These MSR and audio/video cables can exit the tubing by either through a hole in the side of the tubing above ceiling or through a pull box mounted in the wall behind the inside vertical's wall standoff. The cabling can then be routed to locations of the MSR connection point and the audio/video console or hub.

#### **Installation of the Straight MSR Stand**


- 1. Install the TransTRAX Captive Carrier as instructed in the manual supplied with the system, starting at the inside vertical unit. During this part of the installation, it will be necessary to route the audio (Blue) and the MSR (Red) cat5 cables from this end of the lane down the wall to the locations of the audio/video console and the MSR connection point. Depending on the site requirements, this can be done either by bringing the cables out through a hole in the side of the tube above the ceiling, or by going through a pull box mounted in the wall behind the TransTRAX wall standoff.
- 2. Drill a 7/8" hole, (if one has not been provided), in the side of the customer radius or horizontal tube, above the ceiling for the MSR power cable to come out of the tube and be run to the MSR Power Supply Box. Insert the 7/8 bushing provided in the hole before running the cables.
- 3. Prepare the TransTRAX customer vertical for installation as instructed in the TransTRAX installation manual, but, do not mount the tube to the island/curb. (Note: The centerline of the TransTRAX customer vertical tube is to be 12" back from the edge of the curb as described in the TransTRAX installation manual. The TransTRAX Mounting Base channel does not have to be used to secure the customer vertical to the island/curb when a MSR Stand is also being installed.)
- 4. Carefully slide the base cover onto the TransTRAX customer vertical and temporarily secure so that the paint will not be scratched.
- 5. Assemble the mounting angles, 3/8" nuts, bolts, and washers onto the bottom of the customer tube (Do not tighten).
- 6. Place the customer vertical into position on the island/curb, connect all cables and rout the MSR power cable to the MSR Power Supply Box.
- 7. Connect and secure the customer vertical to the TransTRAX tubing that runs into the canopy.
- 8. Check that all joints are straight and the tubing is plumb.
- 9. Slide the mounting angles down the tubes until it is firmly on the top of the island/curb and tighten the 3/8" mounting angle bolts to the tubes.
- 10. Using the holes in the mounting angles as a template, mark and drill for the island/curb for screws (not provided), to secure the angles to the island/curb.
- 11. Slide the base cover down until is rests on the island/curb and then secure it to the surface with a small bead of caulk. (It is recommended to leave gaps in the bead of caulk at the corners to allow for drainage.)
- 12. Connect the MSR power supply cable that is coming out of the top of the customer to the MSR Power Supply Box as instructed in the MSR installation manual.

13.	. Connect the remaining cables of the MSR/Video	Stand to	their respective	cables of t	he
	TransTRAX customer vertical, and re-install the	customer	tube's cover pl	late and any	/
	other covers or plugs.				

14. ]	Install	the MSR	head and	the vio	deo hea	d as p	er their	installation	manuals.
-------	---------	---------	----------	---------	---------	--------	----------	--------------	----------

For Technical Support call E.F. Bavis at (513) 677-0500 and ask for Audio Support.

## **Straight MSR Installation Illustration**

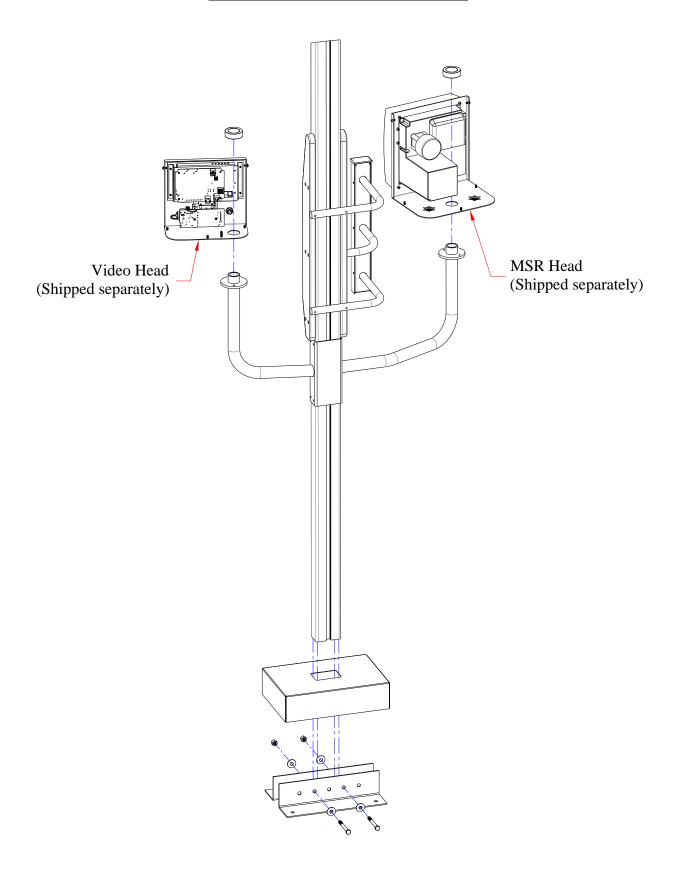

## Suggested Bollard placement only, actual placement is at the discretion of others.

