
Transaction Drawer™

Drawer Replacement Manual

For use with Kit 00521881

E. F. Bavis & Associates, Inc.

201 Grandin Road
Maineville, Ohio 45039
(513) 677-0500


Installation Tool List

7/16" Socket or Wrench
1/4" Nut Driver or #2 Phil Screwdriver (depends on model)
Dry Cloth or Paper Wipes


NOTE: This manual is used for multiple replacement and repair kits. You may not need to follow all instructions and can skip to the next applicable step as directed.

Procedure

1. Disconnect the power to the drawer.
2. Remove the inside back cover, (5 screws).

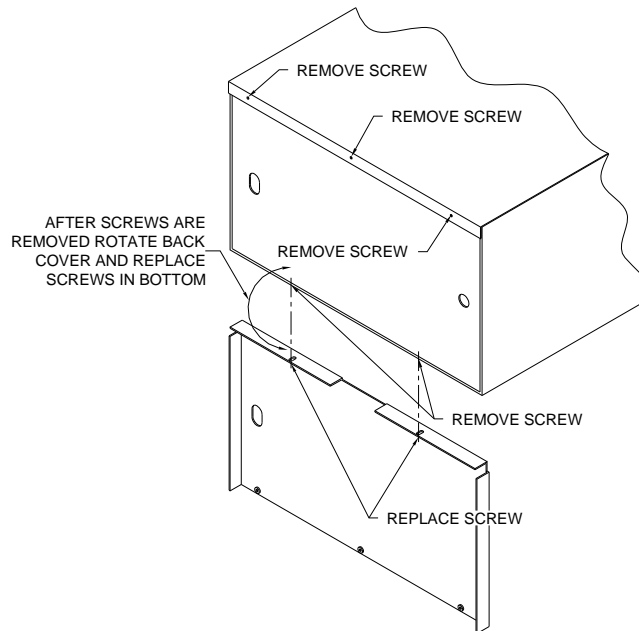

3. Remove the (2) 1/4-20 nuts connecting the Nut to Drawer Mounting Plate to the Red Bin and remove the plate. (Note: Use caution when removing the Drawer Mounting Plate as the Red Bin will slide completely out of the TD Shell)

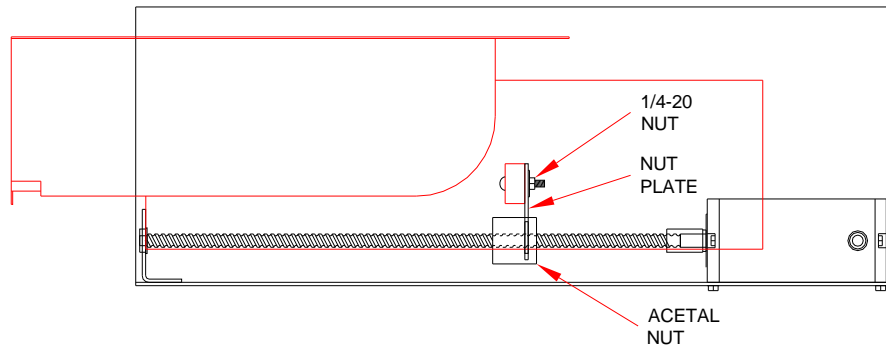

4. Remove and transfer any parts to be reused from the old Bin or install new Customer Door and Arms Assembly to the new Bin.
5. Clean and grease the Threaded Rod and other Drawer parts.
6. Insert Red Bin into guide slots and check that it moves freely.
7. Center the Red Bin in the black plastic slides and reconnect the Red Bin to the Nut with the new Nut to Drawer Mounting Plate.
8. Reinstall the back panel.
9. Reconnect the power and test for proper operation.

For further questions or help, contact the Factory at 513-677-0500.

