
Transaction Drawer™ Verifone Cord Kit Installation Manual

P/N 00668011

E. F. Bavis & Associates, Inc.

201 Grandin Road
Maineville, Ohio 45039
(513) 677-0500

Transaction Drawer™ Verifone Cord Kit

Table of Contents

Instructions.....	1
Figure 1.....	2
Figure 2.....	3
Figure 3.....	4
Parts list.....	5

Installation Instructions

1. Run the drawer to the out position, and mark the hole in the back, left corner of the drawer pan as shown in Figure 2.
2. Mark the hole in the lower left corner of the back panel, as shown in Figure 1, then remove the back panel.
3. Using the 3/16" drill bit provided, drill a pilot hole in both the drawer pan and the back panel. You will also need to drill a 3/16" hole into the left side of the aluminum drawer extension pan to mount wire down with wire tie.
4. Using the 7/8" Unibit provided, chase the holes in the drawer pan and the back panel to 7/8".
5. Using the Greenlee 1-3/8" knock out punch provided, finish punching the holes in the drawer pan and the back panel.
6. Run the drawer back to the inside position.
7. Remove the nut from the 1/4-20 stud located on the inside left of the drawer.
8. Mount the cable harness to the drawer shell by putting the small bracket onto the 1/4-20 stud, and reinstalling the nut discussed in step 7.
9. Mount the large bracket to the back of the drawer pan using the (2) center lock nuts provided in the kit.
10. Feed the cable through the hole in the drawer pan, and install one of the hole plugs with the split around the cable.
11. Insert the hole plug into the hole in the drawer pan
12. Feed the other end of the cable through the hole in the back panel and install other hole plug with the split around the cable.
13. Insert the hole plug into the hole in the back panel.
14. Using the wire ties provided, tie off the cable at the drawer pan end to avoid it getting caught on the internal components as the drawer moves in and out.
15. Remove metal chips and debris and reinstall the back panel.

Bracket Mounting Instructions

1. Place mounting jig onto outside of drawer pan making sure appropriate edges are flush as shown in Figure 2.
2. Drill three 3/16" holes into the drawer pan thru mounting jig.
3. Install the mounting bracket, securing it with the #8-32 acorn nuts provided. Use Loctite on threads to keep the acorn nuts from coming loose.
4. After installing card reader, make sure all components are clear from prohibiting drawer operation.

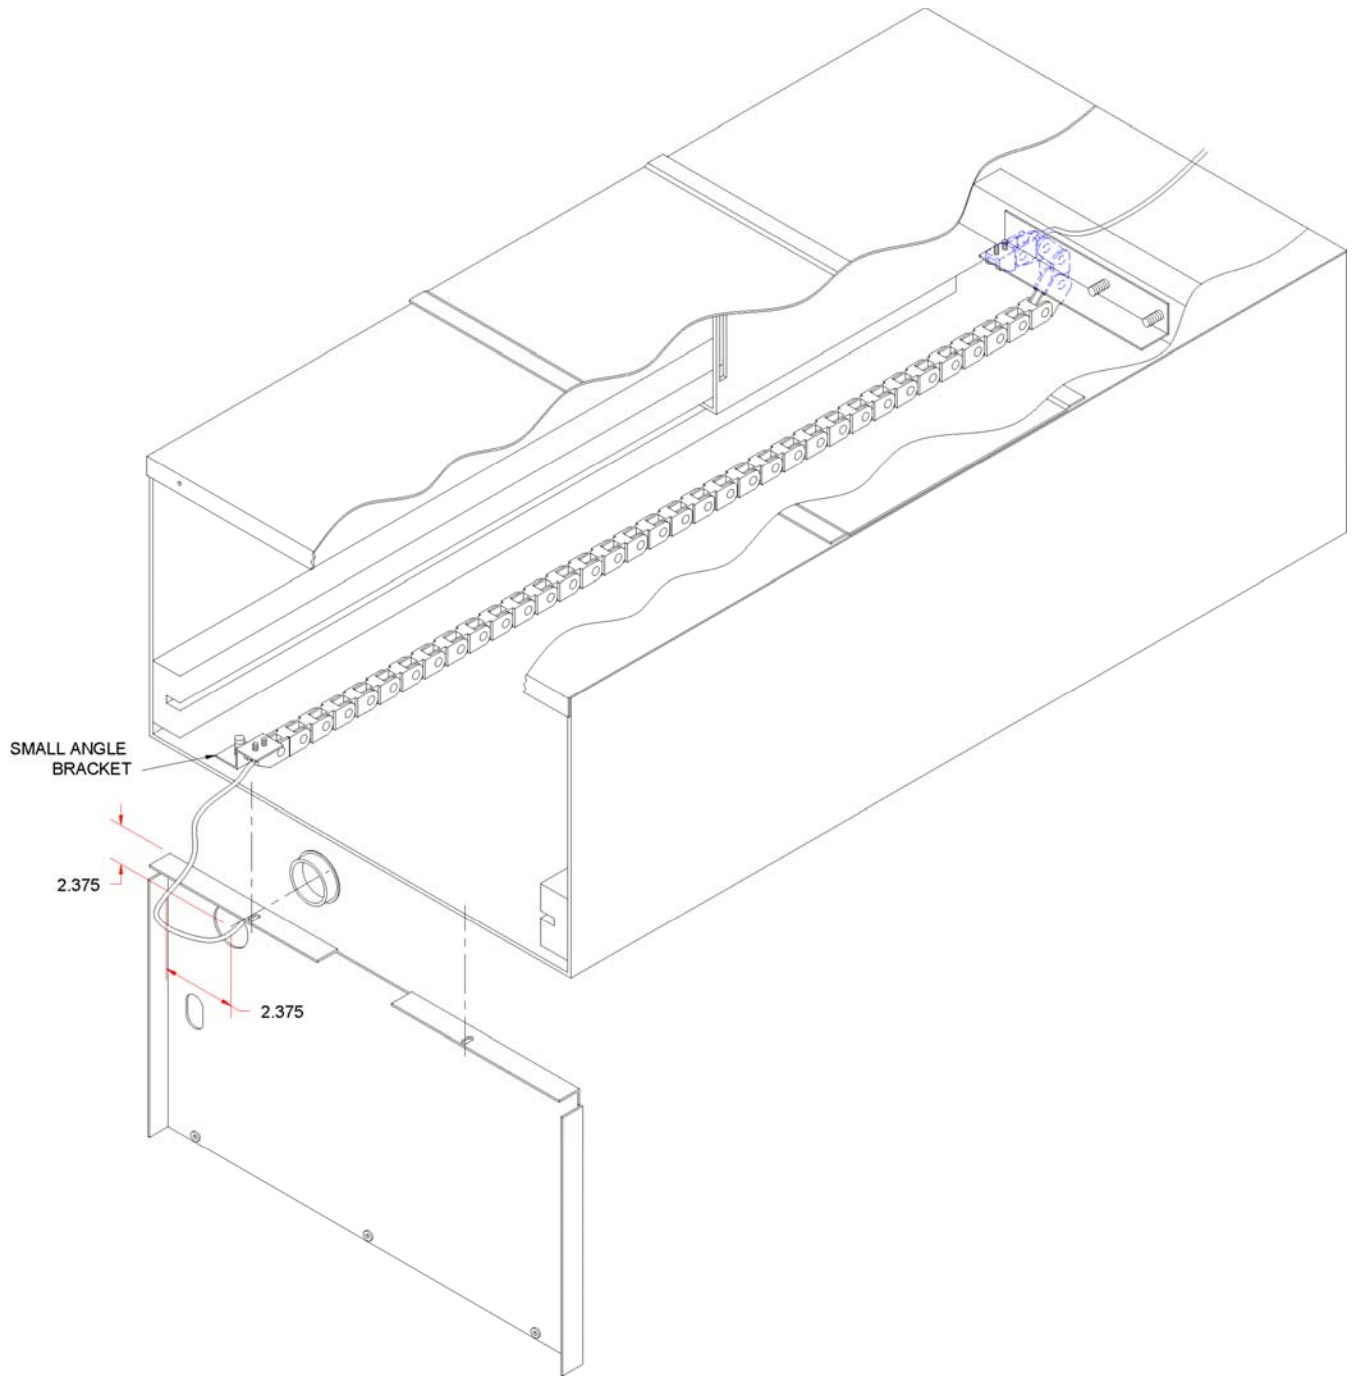


FIGURE 1

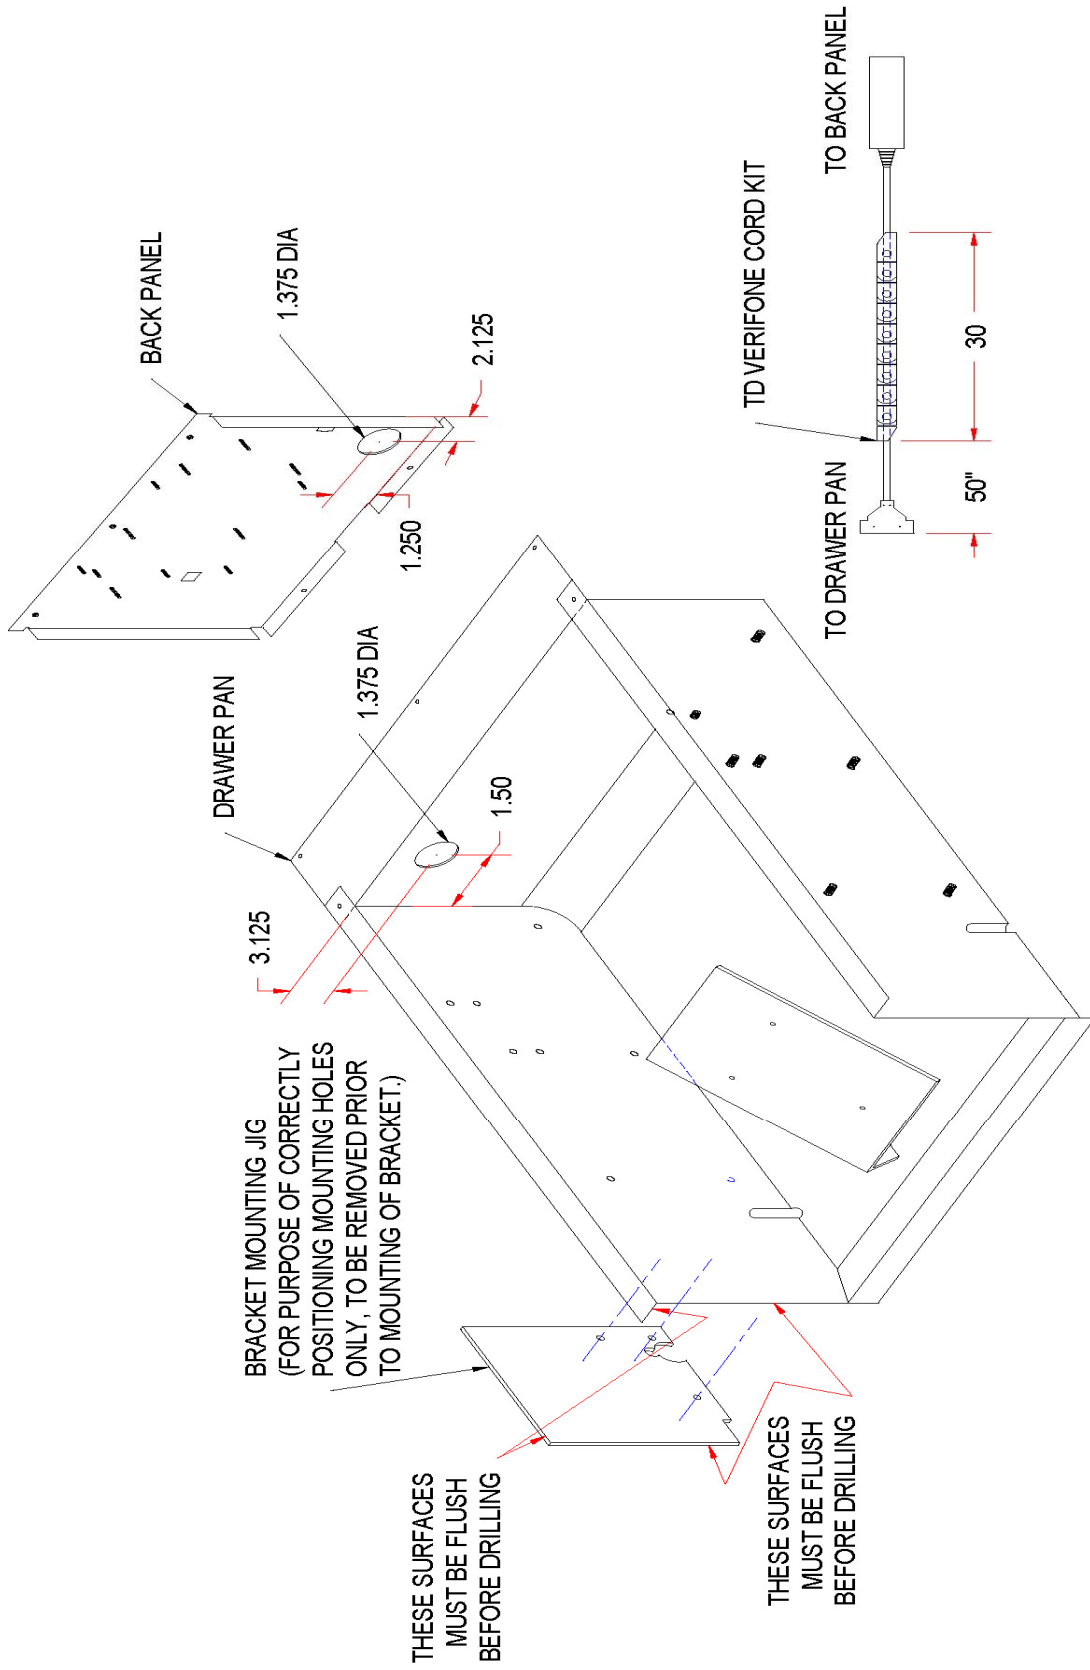


FIGURE 2

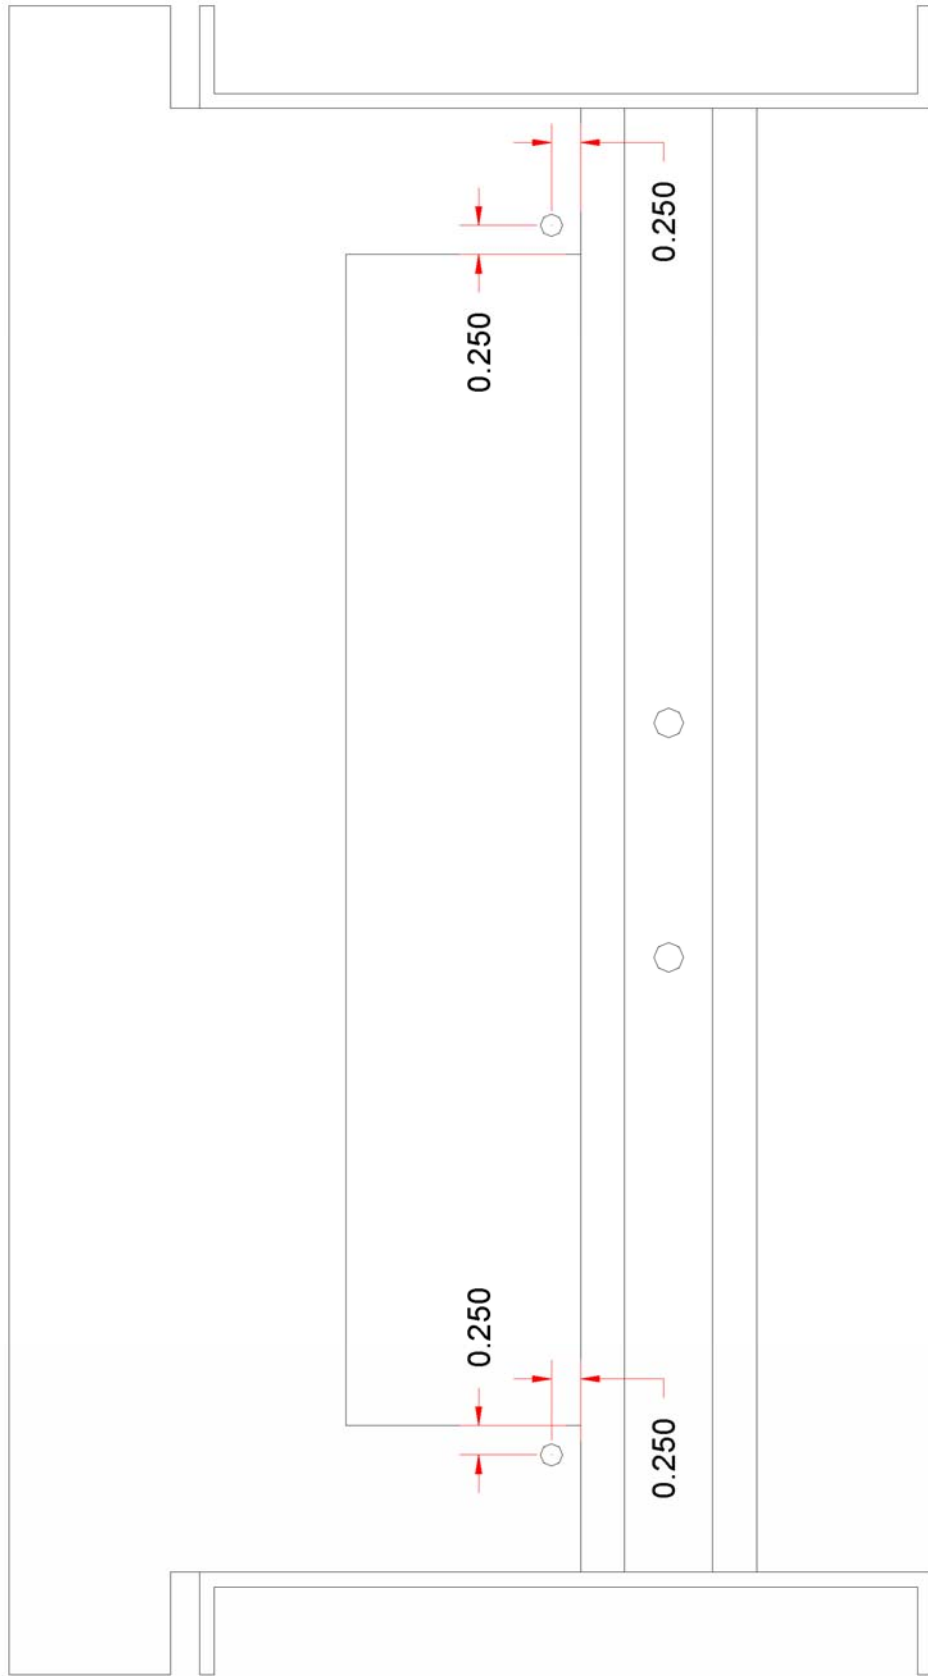


FIGURE 3

<u>ITEM</u>	<u>DESCRIPTION</u>	<u>QTY.</u>
1	TD Verifone cord kit	1
2	7/8" Unibit	1
3	Card mount jig	1
4	3/16" drill bit	1
5	#8-32 acorn nut	4