



201 Grandin Road
Maineville, Ohio 45039
(513) 677-0500

AW Mini Handset Instructions

For use with BavCom™ Audio

Copyright 2020 E. F. Bavis & Associates, Inc.
All Right Reserved

Revised: 10/28/2020
PN: 00674011

AW Mini Handset Instructions

Table of Contents

Instructions	1
Figure 1	2
Figure 2.....	3
Tools Required	4
Drill Template	5
Revisions	6

Instructions:

1. Turn power off at the main breaker.
2. Remove audio panel by removing the 2 Philips head screws on top & on the lower left corner of the audio panel.
3. Remove the #4-40 nuts securing the audio board and then remove the audio board.
4. Using the paper template supplied at the end of this manual, locate and drill the holes accordingly.
5. Install the handset cradle with the 4 truss head screws provided
6. Cut the speaker and volume control wires 6" as shown in figure 1.
7. Strip wires and install the new harness using the red inline connectors provided as shown in figure 1.
8. Disconnect the inside boom mic wire from the pre-amp board. Install both mic extension cables as shown in figure 2.
8. Reinstall audio board.
9. Secure the mic extension wires with the wire ties provided.
10. Turn power on and test the audio.
11. Reinstall the audio panel with the screws removed in step #2.

FIGURE 1


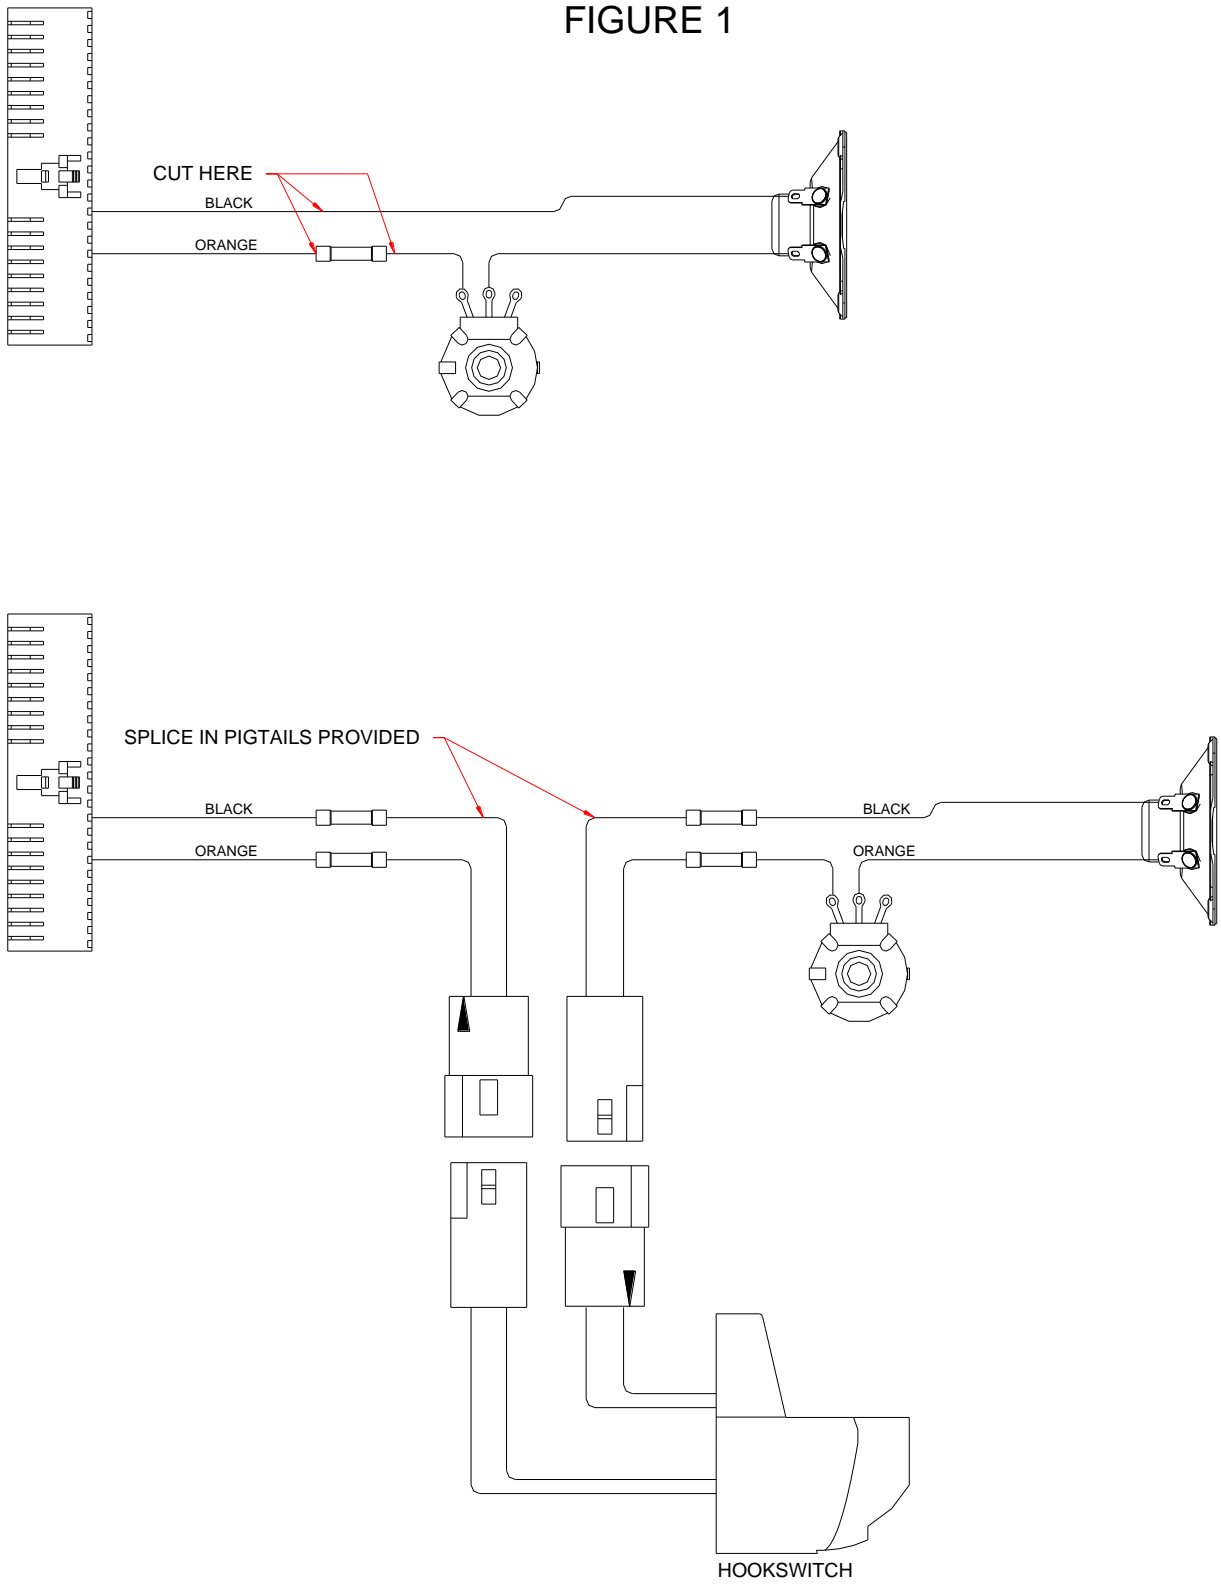


FIGURE 2

EXISTING MIC WIRING LAYOUT


RETROFIT MIC/HANDSET WIRING LAYOUT

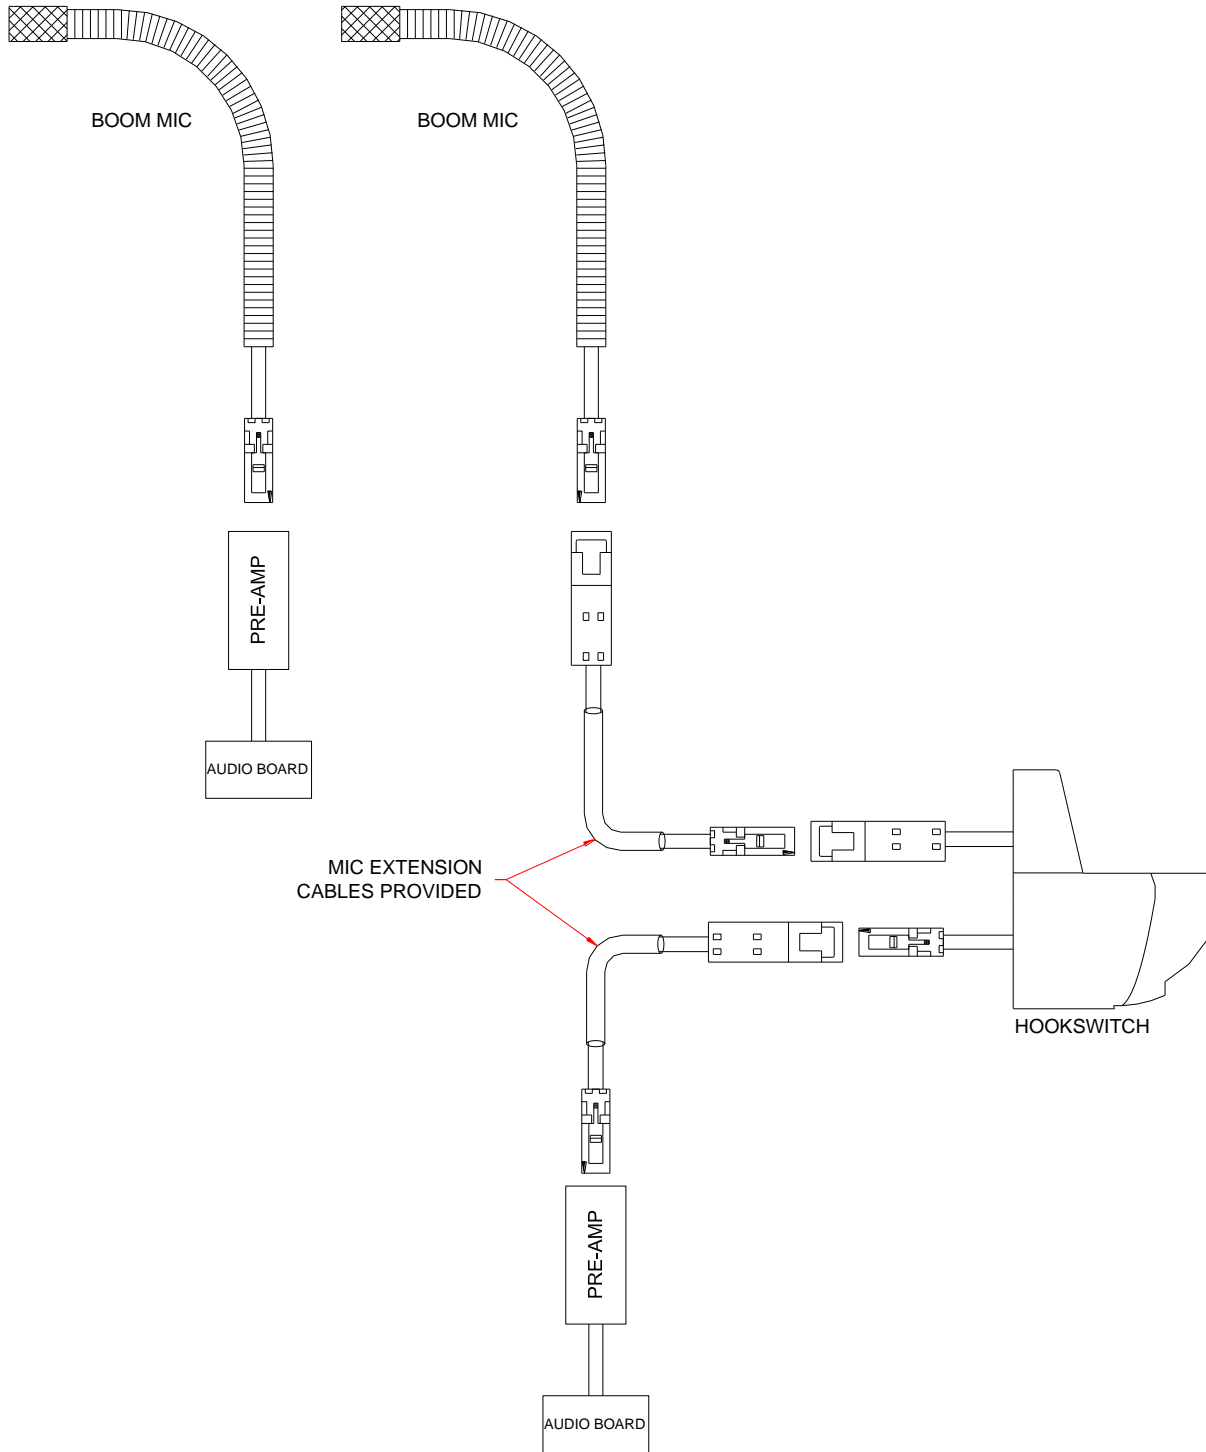

Tools Required

1. Side cutters
2. 1/4 nut driver
3. #2 Philips screwdriver
4. 7/8 Unibit
5. Wire crimpers
6. Drill & 3/16 Bit

Drill Template for Hook Switch

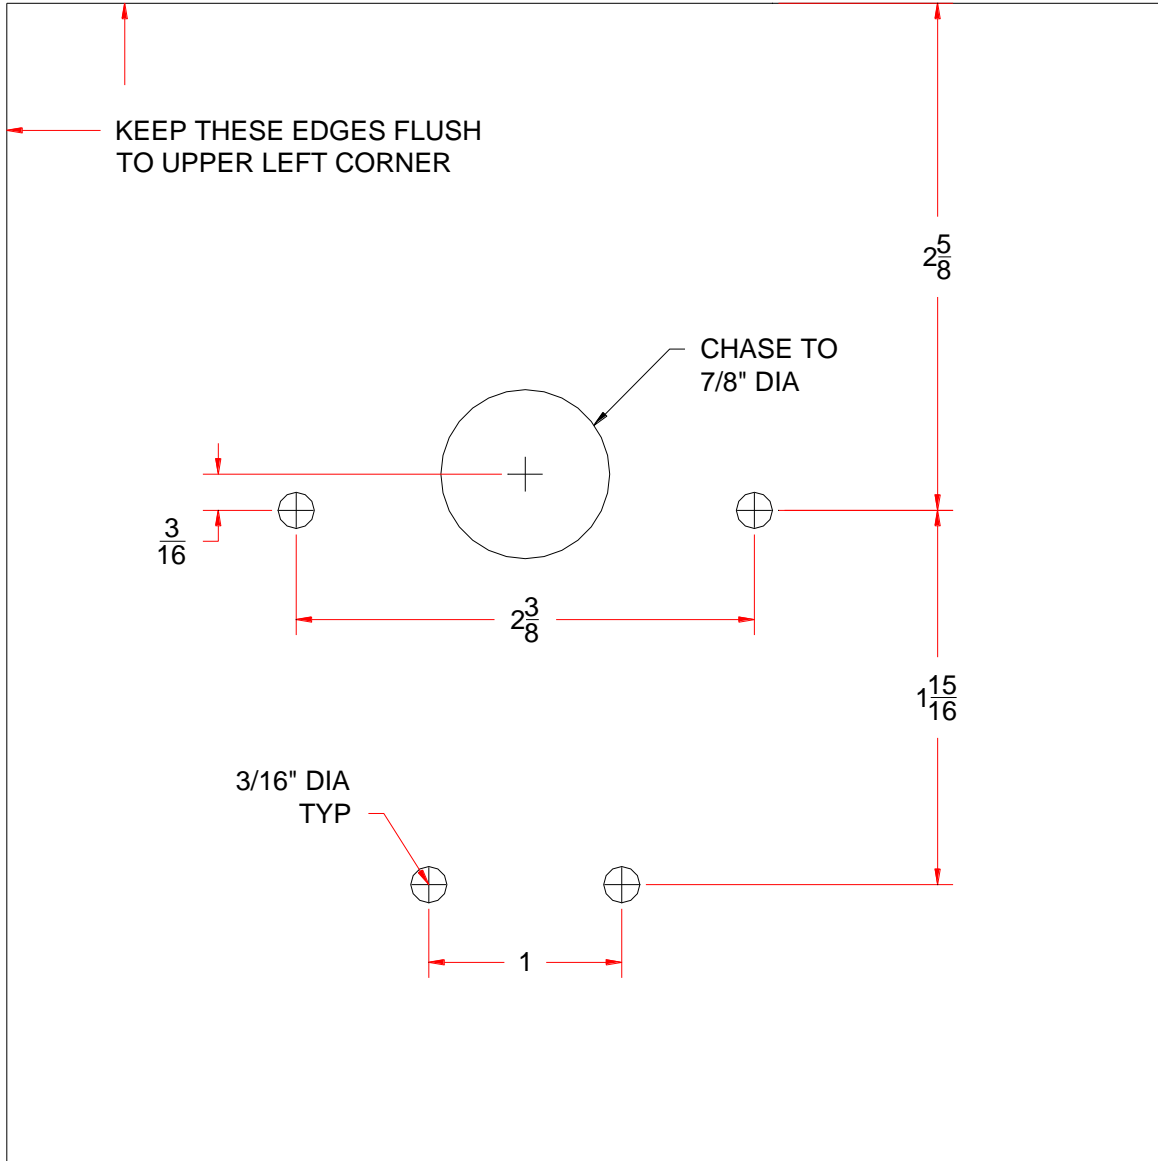

NOTE: Check dimension scaling on this sheet before using.

Revisions:

ECN	Date
3996	05/20/2003
	10/28/2020

