
Replacement Handset Installation Manual


E. F. Bavis & Associates, Inc.

201 Grandin Road
Maineville, Ohio 45039
(513) 677-0500


Installing a Replacement Handset

These are the instructions for installing a replacement handset assembly in place of an “older style” or “leaf switch” handset assembly.


1. Power down the console power source and open the console

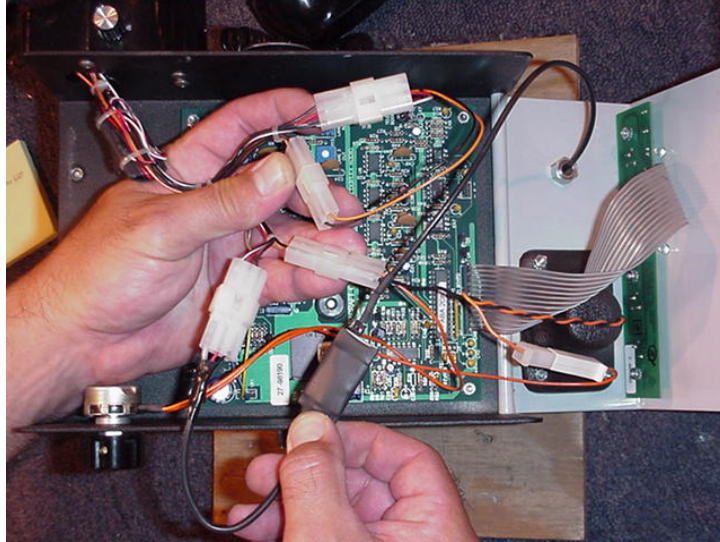


2. Unplug all handset harness connections from the console audio board.

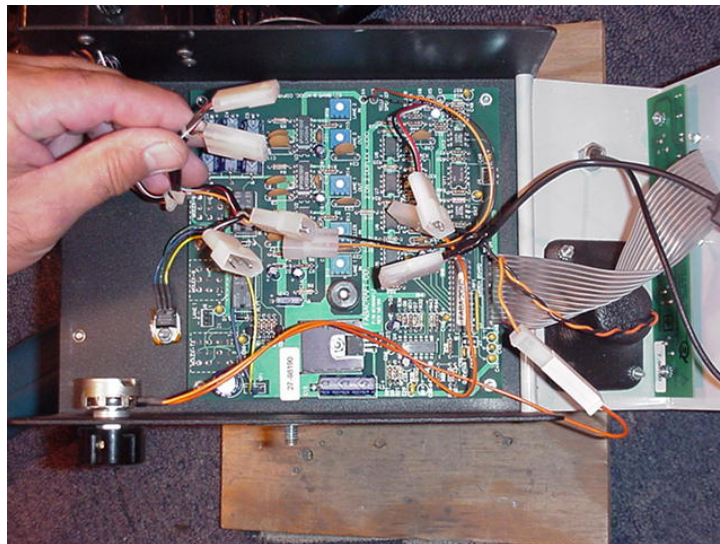


3. Unplug the Pre-amp from the old handset harness (3 position Molex connector plug) and plug into the 3-position Molex connector coming from the audio board (X5, X6, X7).

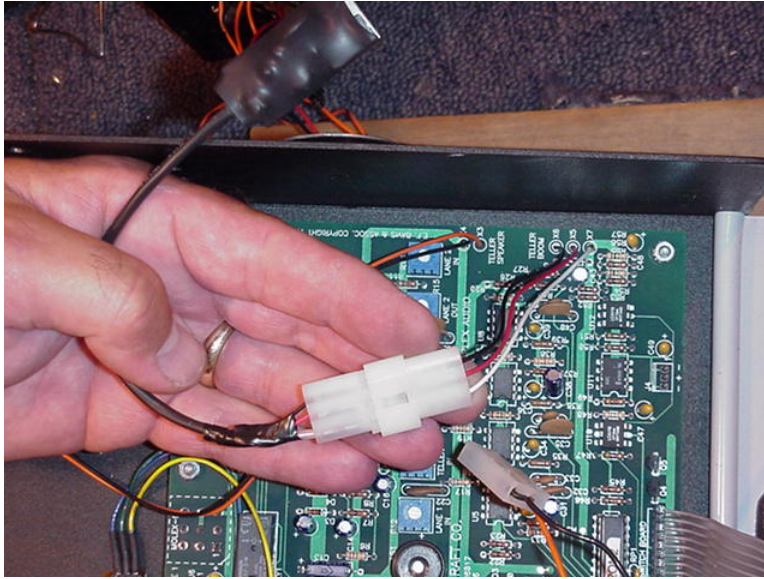

4. Remove the four #8-32 button socket screws using a 3/32 Allen wrench and remove the old handset.
5. Install the new handset assembly using the hardware removed in step 4. **Only the top two holes of the cradle will be used on the new handset assembly.**
6. Plug the 2-position connector from the console mic into the 2-position socket of the new handset harness.
7. Plug the 2-position connector from the new handset harness into the Pre-amp coming from the board.

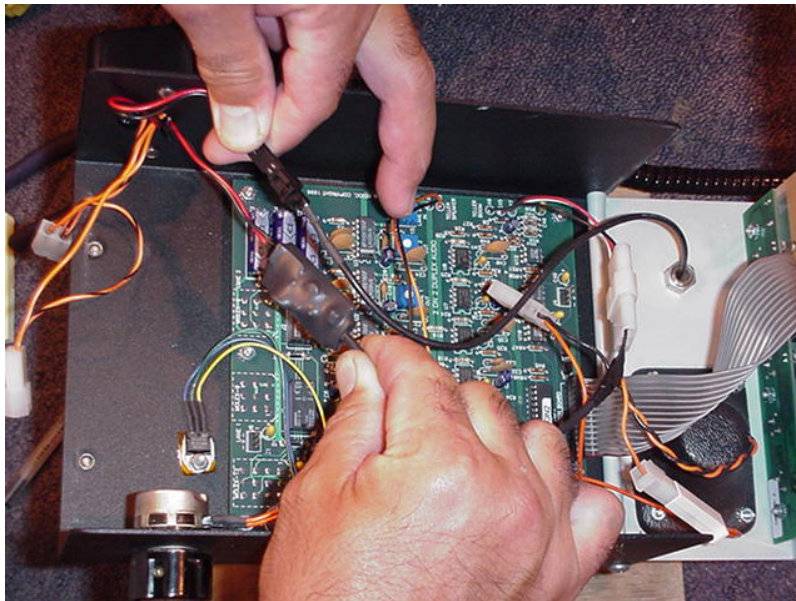

8. Plug the remaining 2-position Molex connectors from the new harness into the corresponding (male/female) connectors (black/orange)

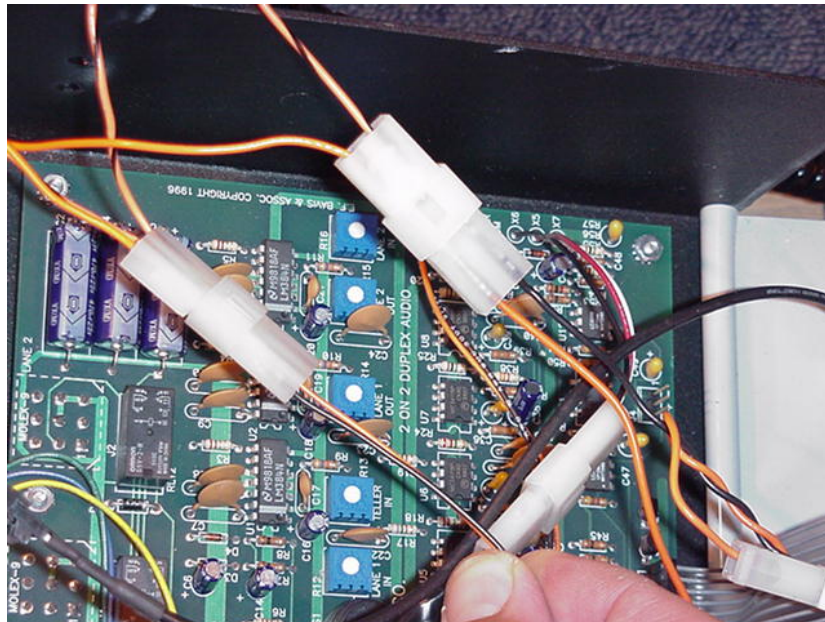

9. Power it up and select a lane
10. **Adjust the audio if needed.** The new handset volume control is located in the center of the handset.

If replacing a new style handset, this handset will be a direct replacement connection to connection.