



201 Grandin Road
Maineville, Ohio 45039
(513) 677-0500

Bavis handset Removal Manual

Copyright 2022 E. F. Bavis & Associates, Inc.
All Right Reserved

Revised: 03/09/2022
PN: 00900308

Bavis Handset Removal Manual

Table of Contents

Bavis Handset Removal and Blank Plate Installation.....	1
Before & After	2
Fig. 1.....	2
Fig. 2.....	3
Fig. 3a & 3b	4
Fig. 4.....	5

Bavis Handset Removal and Blank Plate Installation

1. Remove the (4) 8-32 truss head screws that secure the back cover to the assembly, and then remove the cover. (See Fig. 1)
2. Unplug all of the wire/cable connectors.
3. Connect together the (2) black coax mic cables that come out of the mount, as well as the (2) speaker cables. (See Fig. 4)
4. Remove the (4) truss head screws that secure the hook switch/cradle to the front plate, and then remove the hook switch and attenuator/volume pot. (See Fig. 2)
5. Remove the (2) nuts holding the strain relief bracket to the housing front plate, and then disconnect and remove bracket. (See Fig. 2)
6. Remove the handset cable strain relief nut, and then remove the cable and strain relief. (See Fig.2)
7. Assemble and install the 8-32x1/2 truss head screw, (2) 3/16"ID fender washers, (one on each side of the front plate's base) and 8-32 Nylon locking nut that are provided in this kit, into the handset cable hole so that the washers completely cover the hole. (See Fig. 3a & 3b) DO NOT overtighten to where the washers bend.
8. Install the blank out plate, and secure with the 8-32 Nylon locking nuts that are provided. (See Fig. 4)
9. Re-install the back cover and test the audio system.
10. Mark any of the removed parts that were not working as bad, then box up all of the removed parts and give to the pharmacy/store manager to keep in case they decide to re-install later.

Before & After

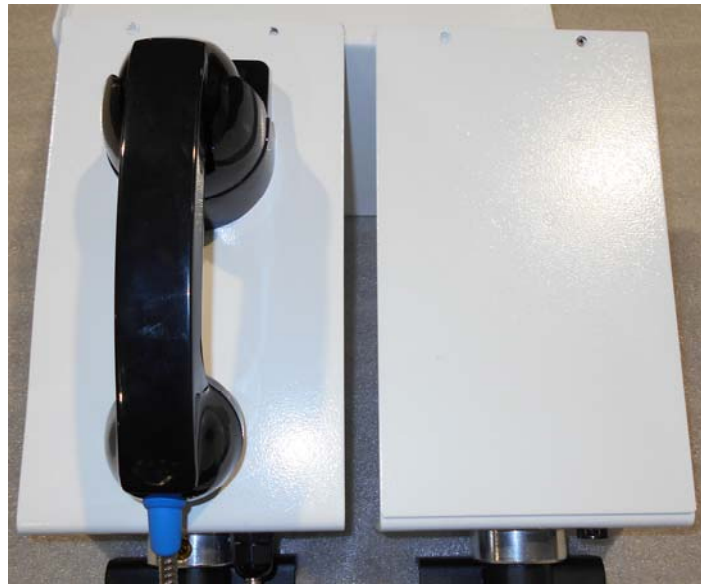


Fig. 1

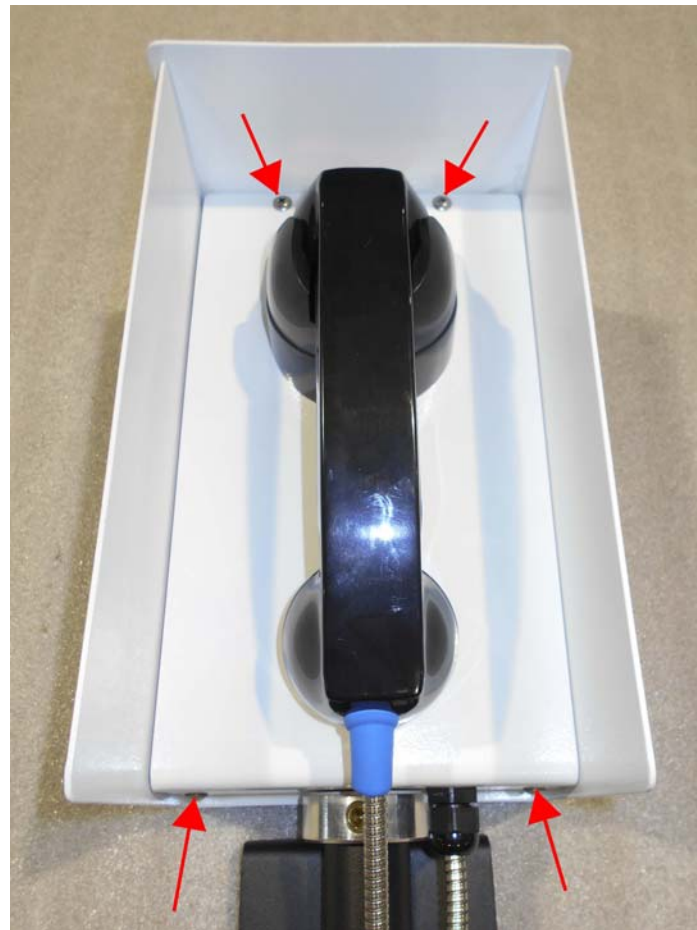


Fig. 2

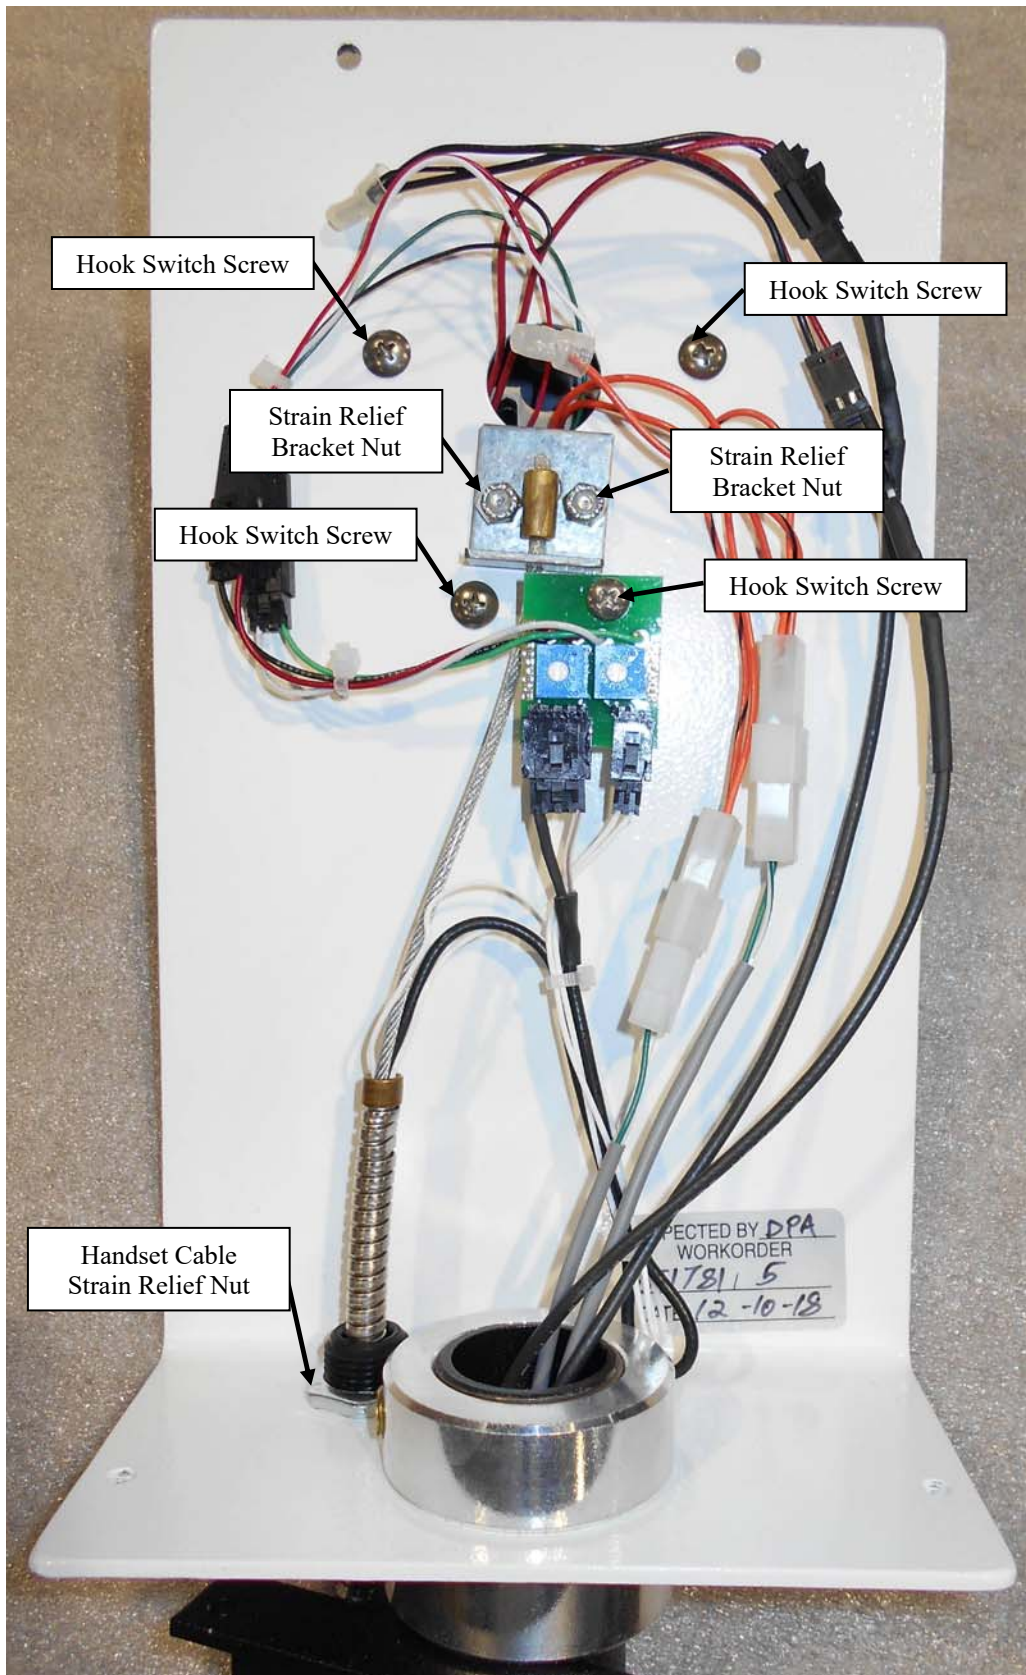


Fig 3a & 3b



Fig. 4



Revisions:

ECN	Date
22046	11/30/2021

