



201 Grandin Road
Maineville, Ohio 45039
(513) 677-0500

Diebold Handset Removal

Diebold Handset Retrofit


1. Remove handset from the cradle. Remove screws to disassemble the face plate from the back plate.



2. Disconnect the RJ12 plug from the RJ12 coupling, and then bundle and secure excess wires with the zip tie provided.



3. Remove screws to disassemble the hook switch assembly from the face plate.

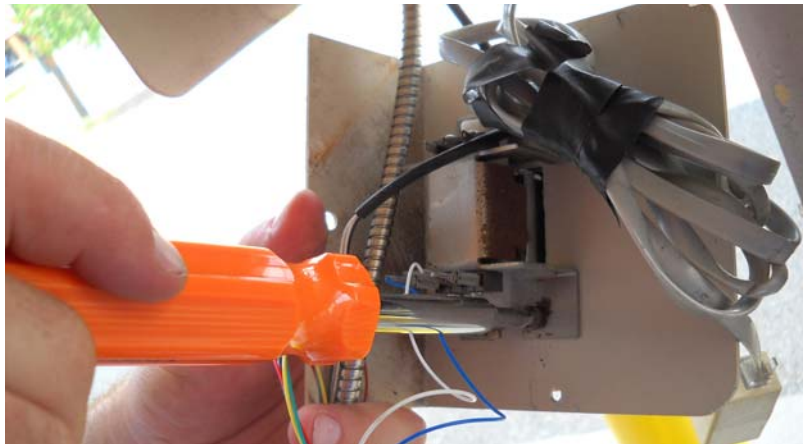

4. Remove nuts to disassemble the handset cable block from the back plate.



5. Assemble the blank-out plate to the faceplate using the nylon locking nuts provided.

6. Re-attach the faceplate that was removed in step #1.

